- A. “Drying complete” indicator
- B. “On/Off” indicator
- C. “On/Off” button
- D. “Intensive Rinse” button
- E. “Rinse Hold” button
- F. Spin speed reduction button
- G. Drying Programme selector knob
- H. Washing Temperature selector knob
- I. Washing Programme selector knob

Red panel labels are printed in blue in the Instructions for Use and in the Programme Chart.

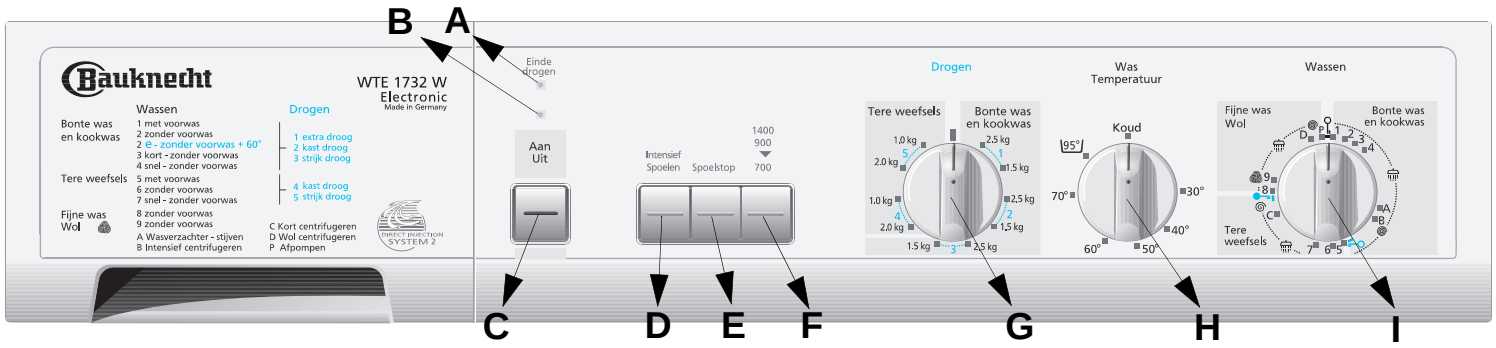

Programme	Care Label	Type of fabric / Degree of soiling / Notes	Max. Load Kg	Detergent and Additives: Softener	Detergent and Additives: Main Wash	Detergent and Additives: Pre-wash	Selectable Special Options = ❇: Intensive Rinse	Selectable Special Options = ❇: Rinse Hold	Selectable Special Options = ❇: Speed reduction 1) rpm	Selector: Temperature Selector °C	Selector: Programme Selector Washing	Selector: Programme Selector Drying	Programme Duration Washing approx. Min.	Programme Duration Drying approx. Min.
Cotton / Cotton Coloured	95 60 40 30	Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	Washing 5.0 Drying 2.5	❇	Yes	❇	❇	—	1400 ▼ 700	Cold to 95	Bonte was en kookwas **1 - 4**	1 Extra dry: • max. 1.5 kg • > 1.5 to 2.5 kg 2 Cupboard dry: • max. 1.5 kg • > 1.5 to 2.5 kg 3 Iron dry: • max. 1.5 kg • > 1.5 to 2.5 kg	115 - 60	45 - 70
Synthetics	60 50 40 30	Slightly to normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	Washing 2.5 Drying 2.0	❇	Yes	❇	—	❇	900 ▼ 700 2)	Cold to 60	Tere weefsels **5 - 7**	4 Cupboard dry: • max. 1.0 kg • > 1.0 to 2.0 kg 5 Iron dry: • max. 1.0 kg • > 1.0 to 2.0 kg	70 - 45	35 - 50
Delicates	30 40	Curtains and delicate dresses, skirts, shirts and blouses.	Washing 1.5	❇	Yes	❇	—	❇	900 ▼ 700 2)	Cold to 40	Fijne was **8**	—	40	—
Wool		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. If you select “Rinse Hold”, do not leave the wash in the rinsing water for too long.	Washing 1.0	❇	Yes	—	—	❇	900 ▼ 700 2)	Cold to 40	Wool **9**	—	35	—
Rinse + Spin	—	Programme for treating with starch or softener. Finishes with an intensive spin cycle. Same as the spin cycle in the Cotton Coloured programme.	5.0	❇	—	—	—	—	1400 ▼ 700	Cold	Rinse + Spin **A** +	—	—	—
Gentle spin	—	Programme for gentle spin cycle. Same as the spin cycle in the Wool programme.	1.5	—	—	—	—	—	900 ▼ 700 2)	—	Gentle Spin	—	—	—
Draining	—	Draining only - no spinning. Alternative way of terminating programmes after “Rinse Hold”.	—	—	—	—	—	—	—	—	Draining **P**	—	—	—

❇ : optional / yes : dosing required

1) Do not reduced speed if subsequent drying is required.

2) To protect the garments, the spin speed is limited to 900 rpm in this programme.

3) The stated programme duration is an approximate value at maximum temperature, but without special options.

Consumption data * - Washing

(Selected programmes only for guidance)

Programme	Washing						Drying 1400 rpm		
	Temperature (°C)	Programme selection	Load (kg)	Energy (kWh)	Water consumption (l)	Programme duration approx. Min.	Energy (kWh)	Time	Water (l)
Cotton, without Prewash**	95	2	5.0	1.80	59	115			
Cotton, without Prewash, int. Rinse**	95	2	5.0	1.80	65	115			
Coloured Cotton, without Prewash**	60	2	5.0	1.10	59	115			
Coloured Cotton, without Prewash**	60	2	2.5***	0.90	43	115	1.6	65	22
Cotton / Coloured Cotton Short	60	3	5.0	1.00	59	90			
Coloureds	40	2	5.0	0.55	59	115			
Synthetics	60	6	2.5	0.70	45	65			
Synthetics	40	6	2.0***	0.40	45	65	1.0	50	20
Synthetics Rapid	40	7	1.5	0.40	42	35	0.9	47	18
Wool	40	9	1.0	0.60	68	50			

* The stated values are guidelines according to international standard conditions (EN 50229).
** For programmes with Prewash the water consumption will be approx. 7 l and the electricity consumption approx. 0.4 kWh higher, and the programme duration approx. 15 minutes longer.
*** Optimal load for washing and drying in a single cycle.

Consumption data * - Drying

Drying mode	WA Spin speed rpm	Load (kg)	Electricity consumption (kWh)	Water consumption (l)	Programme duration approx. Min.
Cotton / Coloured Cotton		5			
2. Cupboard dry 2.5 kg	1400	1st Load 2.5	1.6	22	65
2. Cupboard dry 2.5 kg	1400	2nd Load 2.5	1.5	24	60
Iron dry	1400	2.5	0.9	17	45
Synthetics					
4. Cupboard dry 2.0 kg	900	2.0	1.0	20	50
4. Cupboard dry 1.5 kg	900	1.5	0.9	18	47

PROGRAMME SELECTION AND SEQUENCE OF OPERATION

Operating sequence.

A. Washing only

1. Select programme Ⓘ,
2. Select temperature Ⓗ,
3. Drying programme selector knob must point to ▮ Symbol,
4. Select the desired special options,
5. Press the “On/Off” button Ⓒ.

B. Washing and drying in a single cycle +

1. Select programme Ⓘ,
2. Select temperature Ⓗ,
3. Select drying programme Ⓖ,
4. Select the desired special options,
5. Press the “On/Off” button Ⓒ.

C. Drying only without prior washing

1. Drying programme selector knob Ⓖ on ▮,
2. Turn Programme slector knob Ⓘ to red ,
3. On/Off button Ⓒ,
4. Only then select drying programme Ⓖ.



	Ⓘ ► Ⓗ ► Ⓖ = ▮ ► Ⓓ / Ⓔ / Ⓕ ► Ⓒ
+	Ⓘ ► Ⓗ ► Ⓖ ► Ⓓ ► Ⓒ
	Ⓖ = ▮ ► Ⓘ = ► Ⓒ ► Ⓖ

Installation

- **Before using your appliance read carefully the Installation Guide and the Instructions for Use provided.**
- The appliance is fitted with transit bolts to prevent internal damage during shipping. Before using the appliance, these bolts MUST be removed (see “Installation instructions”)
- Fasten the lock nut after the appliance feet have been adjusted in order to prevent vibration and noise.

Washing

- Sort laundry, empty all pockets, close zips and fasteners.
- Add detergent according to the manufacturer's dosage instructions.
- Select washing programme according to type of fabric and degree of soiling.

Drying

- Select drying programme according to type of fabric, load and drying mode.
- Follow care label instructions.

Suitable for machine drying.

Not suitable for machine drying.